

# MOTOROLA DP3400

## QUICK REFERENCE GUIDE



**MOTOROLA SOLUTIONS**

**PLATINUM RESELLER**

 
Professional and Commercial Radio

Professional and Commercial Radio

Professional and Commercial Radio

Professional and Commercial Radio

Professional and Commercial Radio

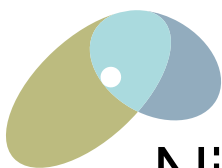

**Ninehundred**  
Communications  
**Group**

**0845 600 4 900**  
[www.ninehundred.co.uk](http://www.ninehundred.co.uk)

# MOTOROLA DP3400

 
 
## QUICK REFERENCE GUIDE

---

### ■ Attaching the Battery

---

Align the battery with the rails on the back of the radio. Press the battery firmly, and slide upward until the latch snaps into place. Slide battery latch into lock position.

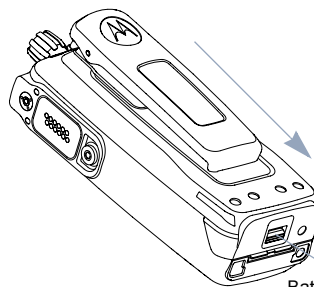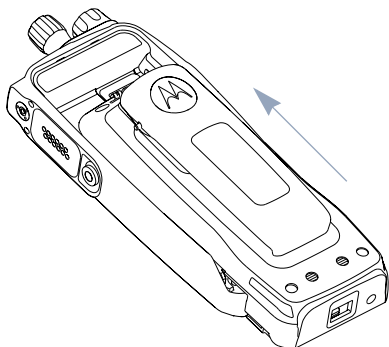

To remove the battery, turn the radio off. Move the battery latch into unlock position and hold, and slide the battery down and off the rails.


### ■ Powering Up the Radio

 ---

Rotate the On/Off/Volume Control Knob clockwise until you hear a click. The LED blinks green.

A brief tone sounds, indicating that the power up test is successful.

If your radio does not power up, check your battery. Make sure that it is charged and properly attached. If your radio still does not power up, contact your dealer.

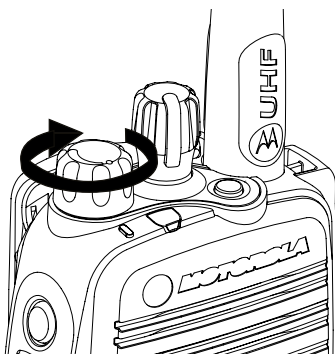

To turn off the radio, rotate this knob counterclockwise until you hear a click.


### ■ Adjusting the Volume

 ---


To increase the volume, turn the **On/Off/Volume Control Knob** clockwise.

To decrease the volume, turn this knob counterclockwise.

**NOTE:** Your radio can be programmed to have a minimum volume offset where the volume level cannot be turned down fully. Check with your dealer or system administrator for more information.

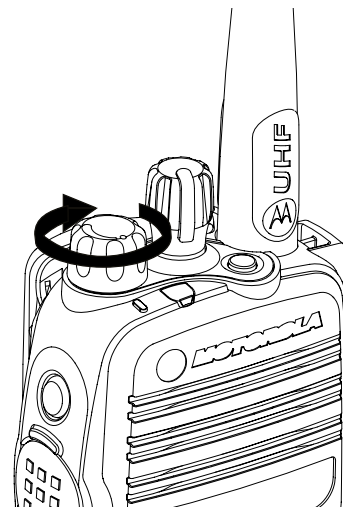

## Radio Controls

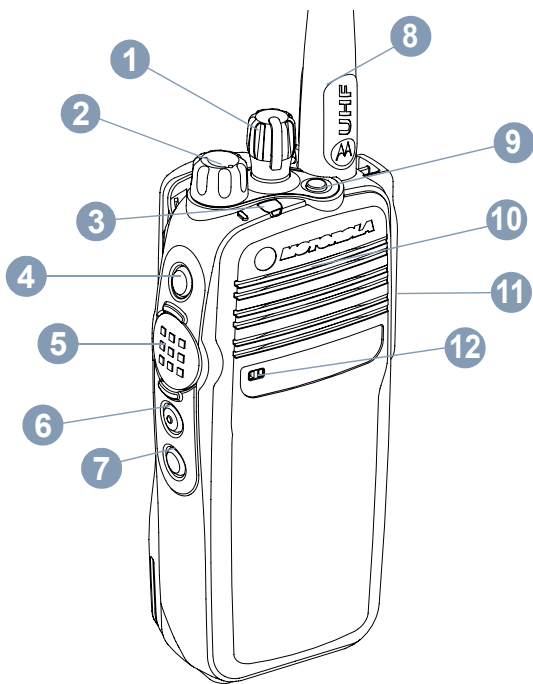 


- 4 Side Button 1\*
- 5 Push-to-Talk (PTT) Button
- 6 Side Button 2\*
- 7 Side Button 3\*
- 8 Antenna
- 9 Emergency Button\*
- 10 Speaker
- 11 Universal Connector for Accessories
- 12 Microphone

\* These buttons are programmable.

- 1 Channel Selector Knob
- 2 On/Off/Volume Control Knob
- 3 LED Indicator

## LED Indicators

 The LED indicator shows the operational status of your radio.

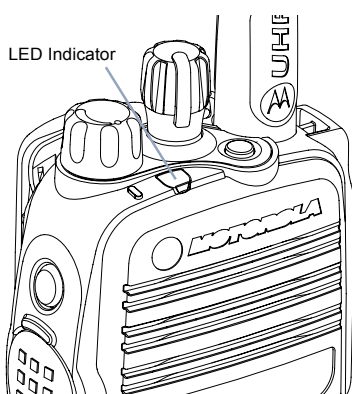

**Solid red** – Radio is transmitting.

**Blinking red** – Channels are currently busy.

**Blinking green** – No service.

## Audio Tones

Alert tones provide you with audible indications of the radio's status or the radio's response to data received.

**Continuous Tone** A monotone sound. Sounds continuously until termination.



**Repetitive Tone** A single tone that repeats itself until it is terminated by the user.



**Momentary Tone** Sounds only once for a short period of time defined by the radio.

