

MOTOROLA DP4600 / DP4601

QUICK REFERENCE GUIDE



MOTOROLA SOLUTIONS

PLATINUM RESELLER

 
Professional and Commercial Radio

Professional and Commercial Radio

Professional and Commercial Radio

Professional and Commercial Radio

Professional and Commercial Radio

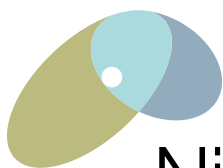

Ninehundred
Communications
Group

0845 600 4 900
www.ninehundred.co.uk

 
MOTOROLA DP4600 / DP4601

QUICK REFERENCE GUIDE

■ Powering Up the Radio

Rotate the **On/Off/Volume Control Knob** clockwise until you hear a click. You see MOTOTRBO (™) on the radio's display momentarily, followed by a welcome message or welcome image.

The LED lights up solid green and the Home screen lights up if the backlight setting is set to turn on automatically.

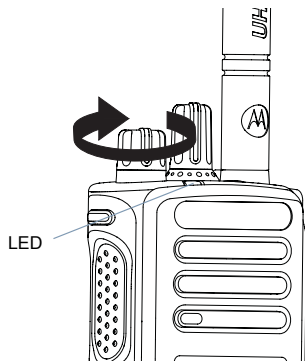


■ Adjusting the Volume

To increase the volume, turn the **On/Off/Volume Control Knob** clockwise.



To decrease the volume, turn this knob counterclockwise.

 NOTE: Your radio can be programmed to have a minimum volume offset where the volume level cannot be turned past the programmed minimum volume. Check with your dealer or system administrator for more information.

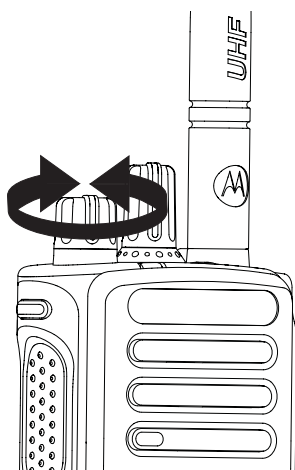


■ Attaching the Battery

  Align the battery with the rails on the back of the radio. Press the battery firmly, and slide upward until the latch snaps into place. Slide battery latch into lock position.

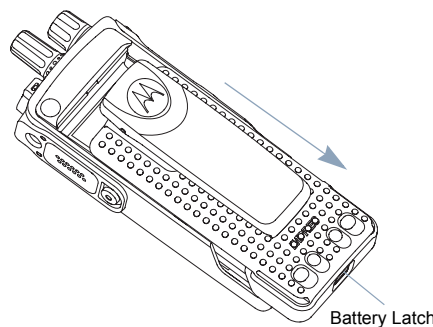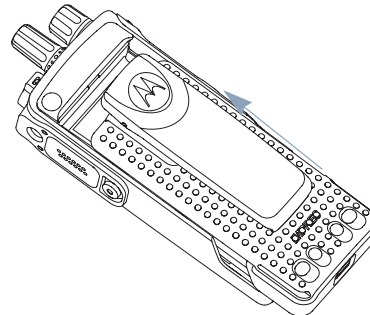

To remove the battery, turn the radio off. Move the battery latch into unlock position and hold, and slide the battery down and off the rails.

 Radio Controls

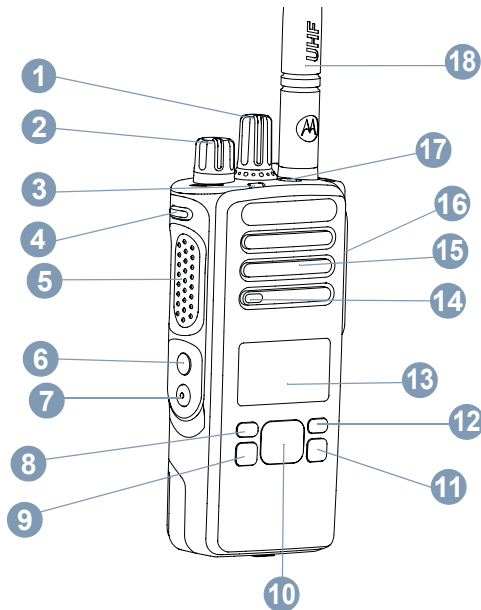


- 1 Channel Selector Knob*
- 2 On/Off/Volume Control Knob
- 3 LED Indicator

- 4 Side Button 1**
- 5 Push-to-Talk (PTT) Button
- 6 Side Button 2**
- 7 Side Button 3**
- 8 Front Button P1**
- 9 Menu/OK Button
- 10 4-Way Navigation Button
- 11 Back/Home Button
- 12 Front Button P2**
- 13 Display
- 14 Microphone
- 15 Speaker
- 16 Universal Connector for Accessories
- 17 Emergency Button**
- 18 Antenna

* Display radios have a continuous-rotary Channel Selector Knob
 ** These buttons are programmable.

LED Indicator

 
The LED indicator shows the operational status of your radio.

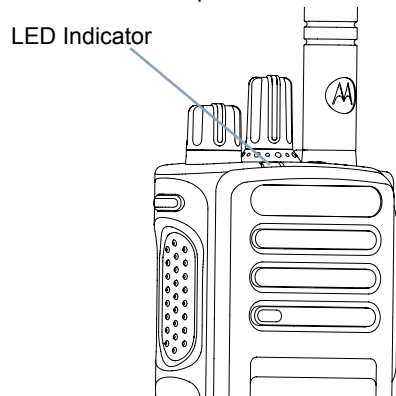

Blinking red – Radio is transmitting at low battery condition, receiving an emergency transmission or has failed the self-test upon powering up.

Solid green – Radio is powering up, or transmitting.

Blinking green – Radio is receiving a non-privacy-enabled call or data, or detecting activity over the air.

Double blinking green – Radio is receiving a privacy-enabled call or data .

Solid yellow – Radio is monitoring a conventional channel.

Blinking yellow – Radio is scanning for activity or receiving a Call Alert, or all local Linked Capacity Plus channels are busy.

Double blinking yellow – Radio is no longer connected to the repeater while in Capacity Plus or Linked Capacity Plus, all Capacity Plus channels or Linked Capacity Plus channels are currently busy, Auto Roaming is enabled, radio is actively searching for a new site. Also indicates radio has yet to respond to a group call alert, or radio is locked.

NOTE: While in conventional mode, when the LED blinks green, it indicates the radio detects activity over the air. Due to the nature of the digital protocol, this activity may or may not affect the radio's programmed channel.

For Capacity Plus and Linked Capacity Plus, there is no LED indication when the radio is detecting activity over the air.